
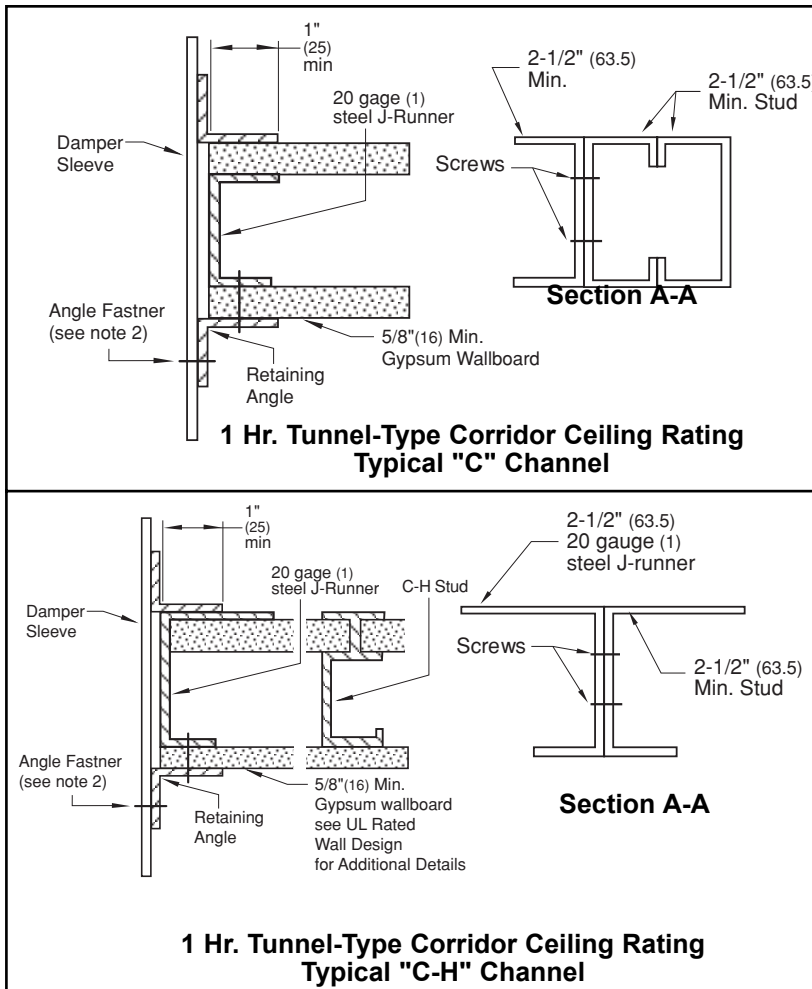


The following installation details apply to models **FSD-131**, **FSD-131-OP**, **FSD-132** and **FSD-132-OP**

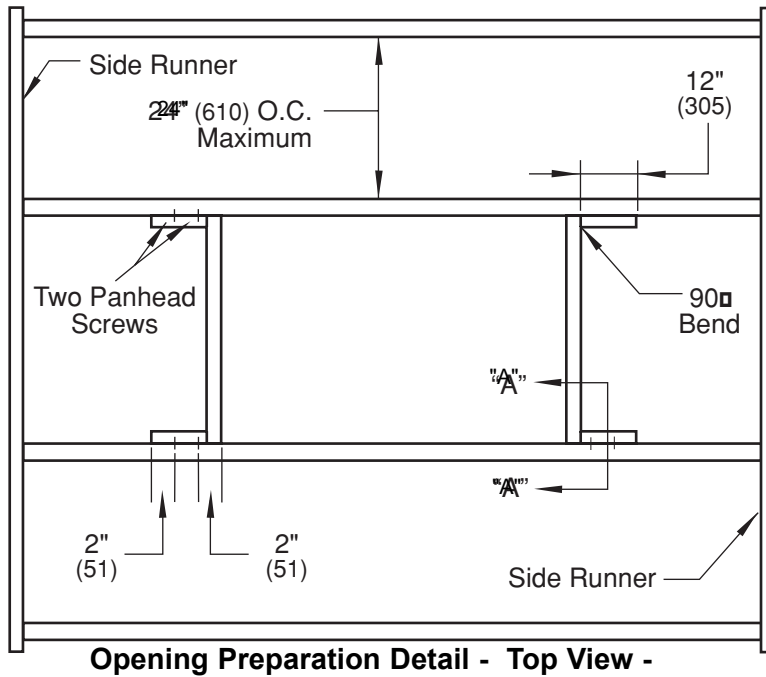

NOTES

1. Gypsum panels must be attached, 12" (305) O.C. maximum, to all stud and runner flanges surrounding opening with 1-5/8" (41) drywall screws.
2. Mounting angles shall be a minimum of 1-1/2" x 3/4" x 20 gauge (38 x 19 x 1). The angles shall be attached to the sleeve, not the partition, with 3/16" (4.8) steel rivets, Quick-Lock Joints, welds, or No. 10 (M5) bolts or sheet metal screws at 12" (305) O.C. maximum. A minimum of two connections per side, top, bottom. Mounting angles shall overlap the wall a minimum of 1" (25). A minimum 3/4" x 20 gauge (19 x 1) flange termination may be used in lieu of mounting angles on the corridor side of the damper sleeve. Refer to Sleeve Termination Supplemental Installation Instructions for further details.
3. See Tunnel-Type Corridor Ceiling Installation Instruction sheet for additional details.